


TAKER B70

480-670

INSTALLATION GUIDE


TAKER B70 REFERENCE GUIDE

LIGHT HEAD (FRONT)

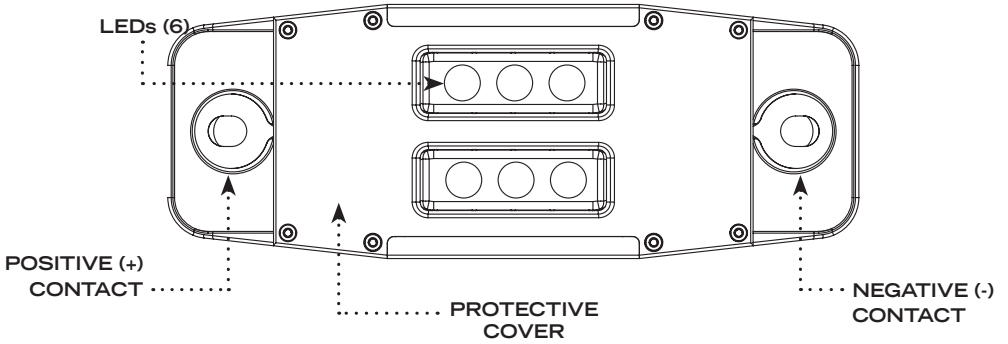


POSITIVE (+)
CONTACT

HANDLE (FRONT SIDE)

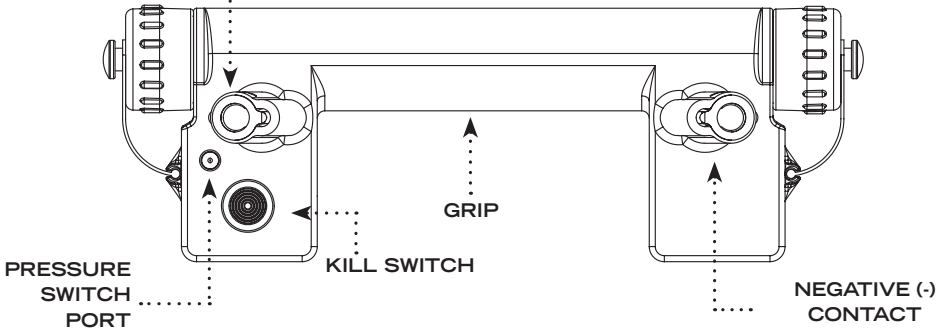

BOLT HOLE (2)

HANDLE (BACK SIDE)

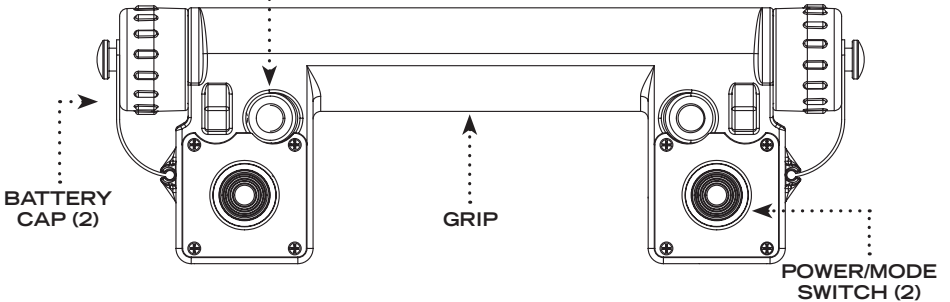

WHAT'S INCLUDED


- ❖ Taker B70 Shield Light Head (P/N 600-480-670)
- ❖ Taker B70 Handle with Electronics & Square Pressure Switch (P/N 60-607)
- ❖ Pressure Switch
- ❖ Grade 8 Washer (2 each)
- ❖ Star Lock (4 each)
- ❖ Foam (2 each) – Flat Shield Only

ITEMS REQUIRED

- ❖ Grade 8 Bolt 5/16" - 18 (2 each):
 - Bolt Head Diameter: 24 mm MAXIMUM
 - Bolt Shaft Diameter: 7.5 mm MAXIMUM
 - Bolt Length: 97 mm plus shield thickness
- ❖ Nut 5/16" - 18 (4 each)
- ❖ Bellville or Split Washer (2 each)

INSTALLATION

The Taker B70 is intended to be installed as an OEM product, by ballistic shield and armor manufacturers.

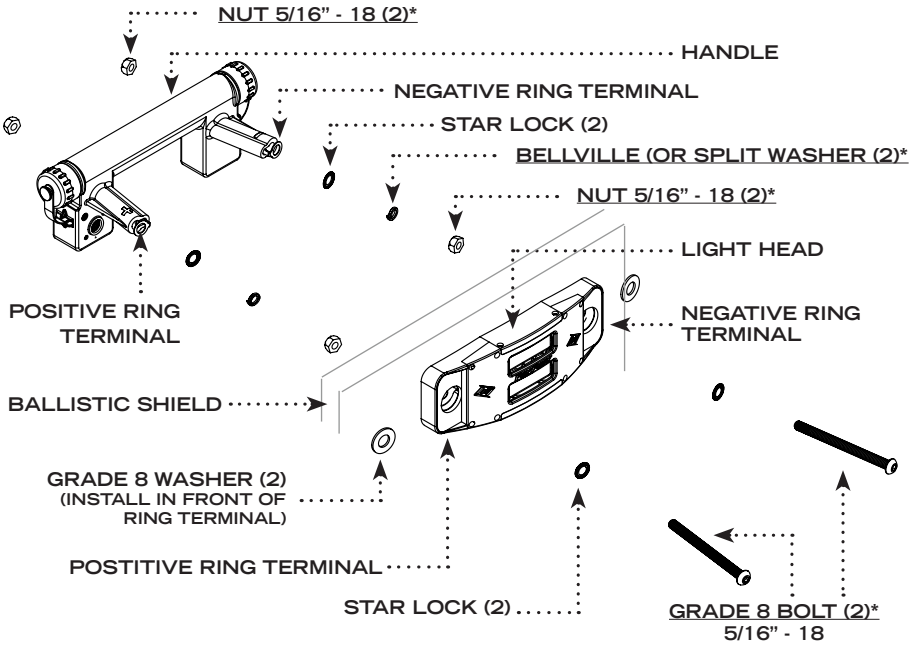

Install as the illustration above.

IMPORTANT: *The underlined items are NOT included and must be supplied by the manufacturer.

