





# NOMAD® PRIME AND P56 BATTERY REPLACEMENT (P/N 600-200-800)

FOR P/N 200-800, 200-800-TC, 200-811/812/813/814/818/819

## REMOVING THE BATTERY TUBES | 15 MINS (APPROX)

The Nomad® Prime and P56 uses six (6) Battery Tubes. Repeat the following steps three (3) times in order to replace all six (6) Battery Tubes.

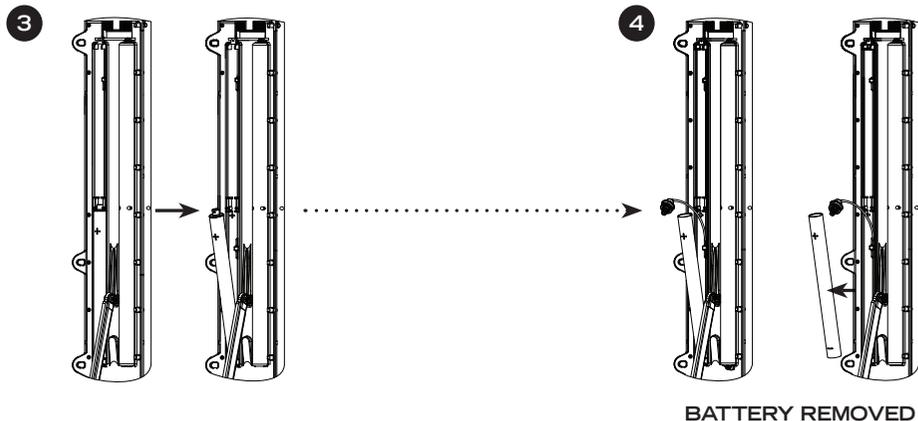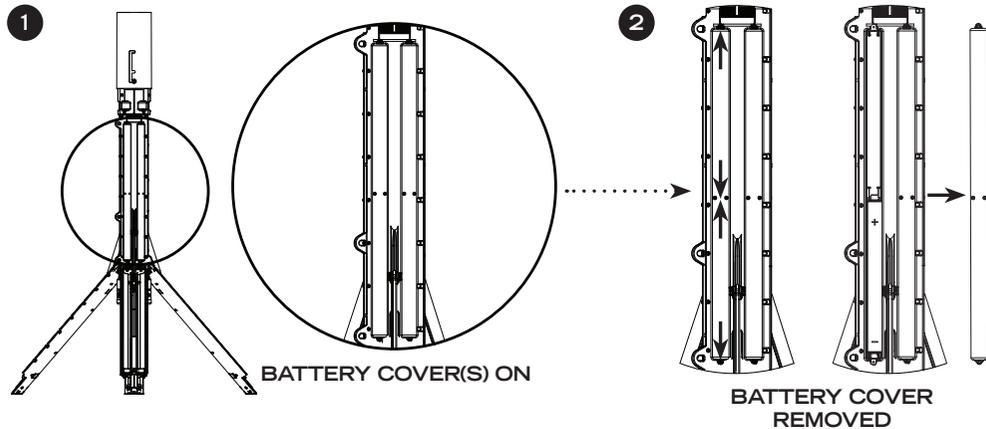

Make sure the Nomad® is OFF and UNPLUGGED before starting.

- 1** Open the Folding Tripo-Scope® Legs so they are locked and deployed. Then, locate a Battery Cover.
- 2** Use a Phillips Head (+) Screwdriver to remove the four (4) screws that hold the Battery Cover. Once the screws are removed, pull the Battery Cover off and set it aside.

❖ IMPORTANT: There is only one (1) Battery Tube located under each one (1) of the Battery Covers.

Once the Battery Cover is removed, the Battery Tube is accessible. Start with the UPPER battery first.

- 3** At the TOP of the Battery Tube, there will be a red (positive) Battery Tube Cap. Place an index finger on it, pull tube out by the red Cap (this should then help the bottom portion (black Cap) of the Battery Tube to easily slide out of the Battery Compartment). This action is similar to removing a AA battery from any generic battery holder.

❖ To easily remove the Battery Tube from the Nomad® Body, it is best to pull straight out from the “crown” of the Red Cap.

❖ NOTE: The wiring for the positive (+) and negative (-) Caps will remain attached to the Nomad® Body while the Battery Tube is pulled out of the Battery Compartment.

- 4** Remove the Battery Tube Caps (red and black) from each end of the Battery Tube. This can be done by simply popping the Battery Tube Cap off with one thumb.

❖ DO NOT pull the Battery Tube Caps by the wires.

REPEAT STEPS 2-4 FOR THE 5 REMAINING BATTERIES.

## INSTALLING THE BATTERY TUBES | 15 MINS (APPROX)

Installing the Nomad® Battery Tubes follows the same procedures as removing them but in reverse order.



## WARNINGS



Be sure to check polarity [positive (+) and negative (-)] when installing the Battery Tubes.

- 1 Start with the bottom of the Battery Tube. Attach the black Cap to the NEGATIVE end of the Tube. While holding the Cap in place, reinsert it into the Battery Compartment, at an angle.
- 2 While still applying downward pressure to the Battery Tube, attach the red Cap to the opposite POSITIVE end of the Tube. Once secure, slide the Tube into place in the Battery Compartment.
  - ❖ **IMPORTANT:** Be sure to place the red and black wires directly behind the Battery Tube before re-installing the Tube into the Battery Compartment. This will prevent the wires from being damaged, and it will help the Battery Tube go back into place easier.
- 3 Once the Battery Tube is installed, test the Nomad® to make sure it turns ON. If it does not, check the Battery Tubes for any connection errors with the positive (+) and negative (-) ends. Then, place the Battery Cover back over the Battery Tube and tighten the four (4) screws into place.

## LIMITED LIFETIME WARRANTY

FoxFury, LLC (“FoxFury”) warrants this product to be free from defects in material for a lifetime of use except for batteries, LEDs, abuse, and normal wear. Mechanical components subjected to constant deformation or action, like springs and switches, and electronic components including chargers and LEDs are warranted for a period of two years from the time of purchase. FoxFury will repair or replace a product should it be determined defective.

Rechargeable batteries are consumable items, and carry a pro-rated 2 year warranty. Example: If a problem arises after one year of use, only 50% of the replacement cost will be charged, as long as the batteries are verified to have been charged, stored, and used in accordance with required practices.

This limited lifetime warranty is given only to the original end user of the accompanying product. If you purchased a product from someone other than an authorized FoxFury reseller/distributor or if the product was used, (including but not limited to demo models, show models or refurbished product by someone other than FoxFury) prior to your purchase, you are not the Original Purchaser and the product that you purchased is not covered by this warranty. This limited warranty is VOID if this Product has been altered or modified in any way (including but not limited to attempted warranty repair without authorization from Foxfury and/or alteration/removal of the serial number). To expedite warranty concerns, we encourage the end user to register their FoxFury Product at [www.foxfury.com/pages/warranty-registration](http://www.foxfury.com/pages/warranty-registration).

THIS IS THE ONLY WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARE EXPRESSLY DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW.

You may have other specific legal rights which vary by jurisdiction. Go to [www.foxfury.com/pages/warranty](http://www.foxfury.com/pages/warranty) for a complete copy of the warranty. Retain your receipt for proof of purchase.

## CONTACT FOXFURY

FoxFury, LLC  
Oceanside, CA 92056 USA  
**Toll-Free:** 844-FOXFURY  
**Tel:** 760.945.4231  
**Fax:** 760.433.3650  
**Email:** [service@FoxFury.com](mailto:service@FoxFury.com)  
**Web:** [FoxFury.com](http://FoxFury.com)

All FoxFury products are designed in Oceanside, CA. All FoxFury products are manufactured with the highest quality USA and foreign parts. Products are assembled in either FoxFury's controlled plant in Asia or the USA, under strict quality control.

## CALIFORNIA PROPOSITION 65

This product can expose you to chemicals including Lead and DEHP, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).