




## DRILLING TEMPLATE

FOR USE WITH THE TAKER R40 (P/N 700-331)

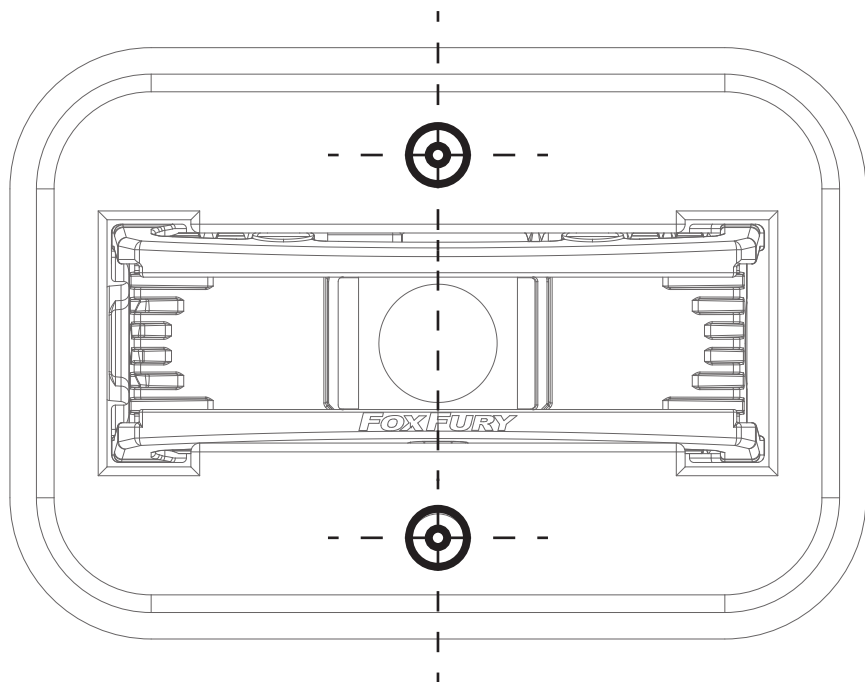

### INSTRUCTIONS:

Use this template to drill the required holes for mounting the Taker R40 to a Riot shield. Print to Actual Size.


1. Begin by taping this sheet to the shield and centering it (or vertically aligning it to desired location).
2. Drill two pilot holes that are 50 mm apart using a  $\frac{1}{8}$ " drill bit (use the smallest circle (●) as a guide to drill the pilot hole).
3. Using the recommended  $\frac{17}{64}$ " or 7mm drill bit, drill two holes that are 50mm apart (approx 2").

NOTE: Image above is to size and holes are 50mm apart.  
Due to various printer settings, please confirm printed dimension for the drill holes is approximately 50 mm.



## DRILLING TEMPLATE

FOR USE WITH THE TAKER R40 (P/N 700-331)

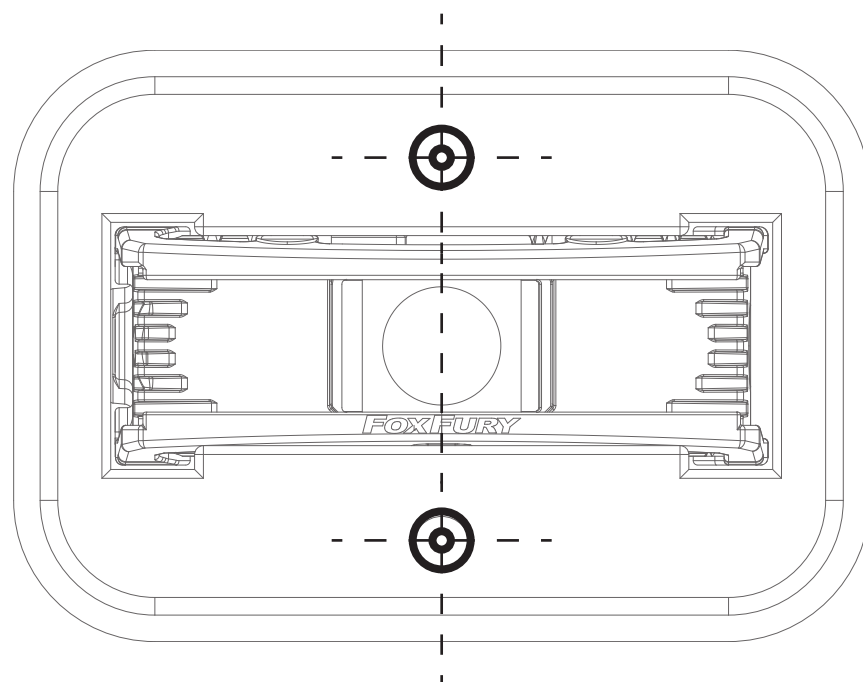

### INSTRUCTIONS:

Use this template to drill the required holes for mounting the Taker R40 to a Riot shield. Print to Actual Size.

1. Begin by taping this sheet to the shield and centering it (or vertically aligning it to desired location).
2. Drill two pilot holes that are 50mm apart using a  $\frac{1}{8}$ " drill bit (use the smallest circle (●) as a guide to drill the pilot hole).
3. Using the recommended  $\frac{17}{64}$ " or 7mm drill bit, drill two holes that are 50mm apart (approx 2").

NOTE: Image above is to size and holes are 50mm apart.  
Due to various printer settings, please confirm printed dimension for the drill holes is approximately 50 mm.